

end of "A", flush with end.

Double Anchor Fastener


2



Use DOUBLE ANCHOR FASTENERS to connect "C" legs with bottom slot of "A". Tighten with equal spacing between legs. Outside legs will be flush with the ends.

IC1

Tighten enough to keep legs in place but it will be helpful later to leave slightly loose. May be helpful to assemble upside down and flip entire stand over when complete

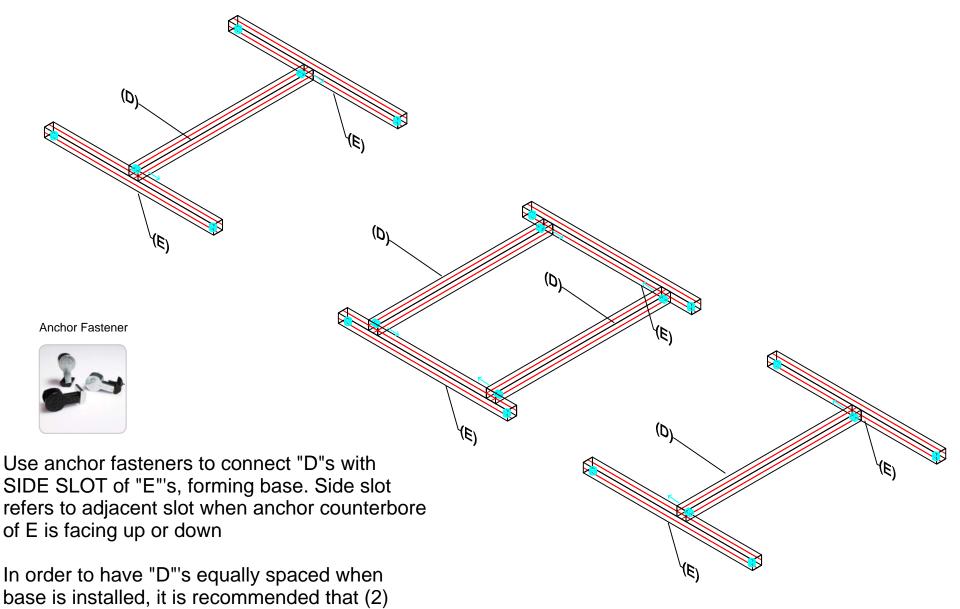

base units have (1) "D" centered, and middle base unit has a "D" close to each end

